




1. Metal reglet as manufactured by C & J Metal Products Inc. should be secured to substrate with masonry anchors.
2. Fasteners should be placed no further than 12" apart.
3. Metal reglet and counter flashing are notched 3" on one end for lap. Be sure to stagger lap joint so not to have reglet lap and counter flashing lap closer than 12" apart.
4. Install hooked end of hanger clips at 24" centers into metal reglet receiver.
5. After counter flashing is installed, bend lower portion of hanger clips up snug against face of counter flashing.
6. Apply continuous bead of compatible sealant along top edge of metal reglet.

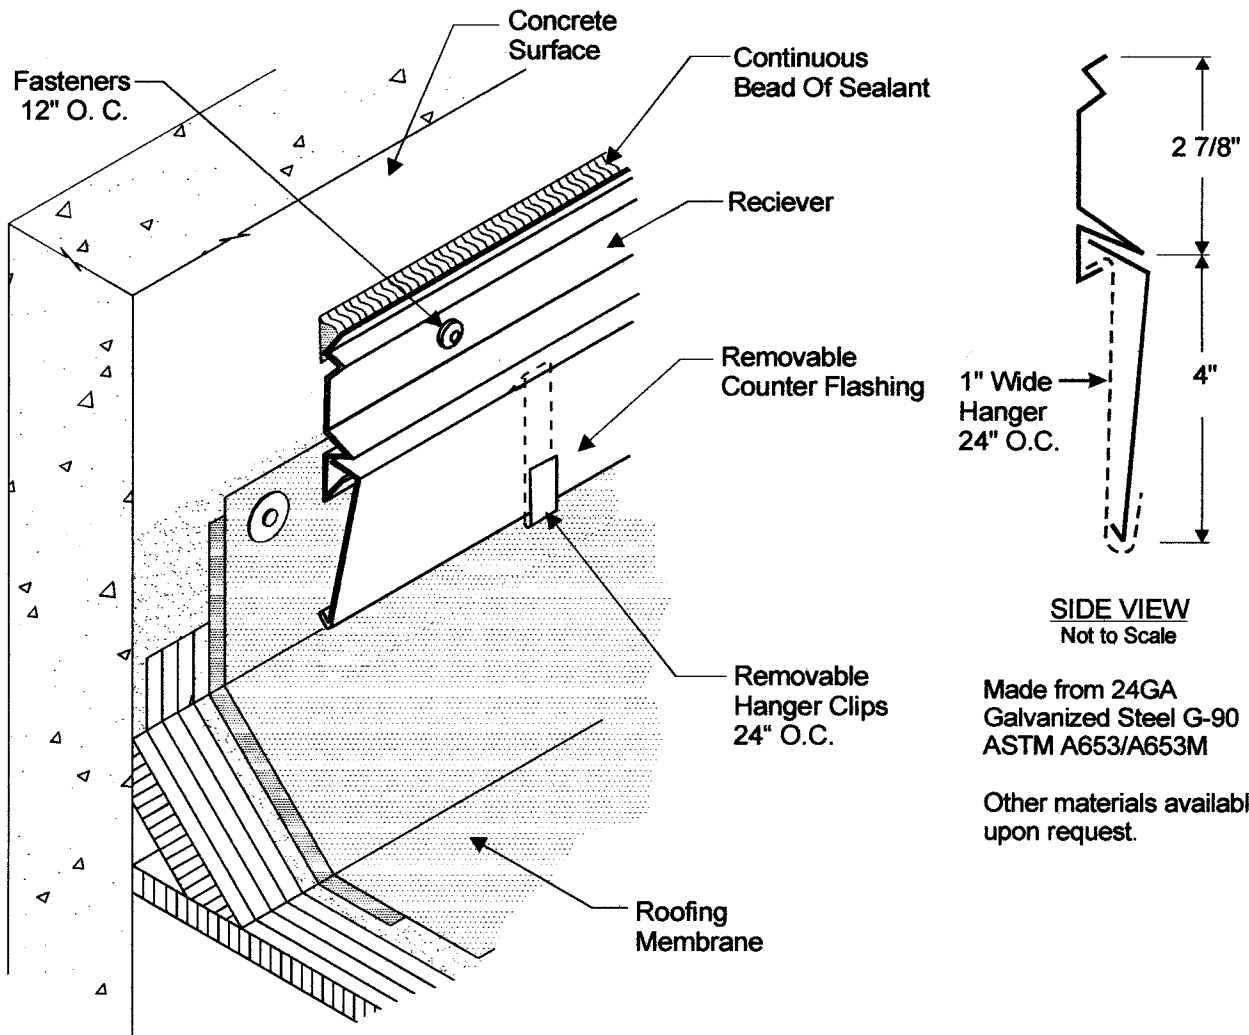

SIDE VIEW
Not to Scale

Made from 24GA
Galvanized Steel G-90
ASTM A653/A653M

Other materials available
upon request.

It is recommended that removable counter flashing receivers be elevated 10 in. above finished roof. The lower edge of the counter flashing should be 1 in. minimum above a cant.

In high wind areas anchor clips can be specified for the lower edge of the counter flashing in addition to hanger clips.



This Information is Adapted From
Architectural Sheet Metal Manual • 5th Ed.