




1. Metal reglet as manufactured by C & J Metal Products should be secured to substrate with screw-shank nails long enough to penetrate the wood nailer at least 1-1/4". Nail heads should be at least 3/16" in diameter, or minimum No. 8 screws long enough to penetrate the nailer 3/4".
2. Nails or screws should be placed no further than 12" apart.
3. Metal reglet and counter flashing are notched 3" on one end for lap. Be sure to stagger lap joint so not to have reglet lap and counter flashing lap closer than 12" apart.
4. Install hooked end of hanger clips at 24" centers into metal reglet receiver.
5. After counter flashing is installed, bend lower portion of hanger clips up snug against face of counter flashing.

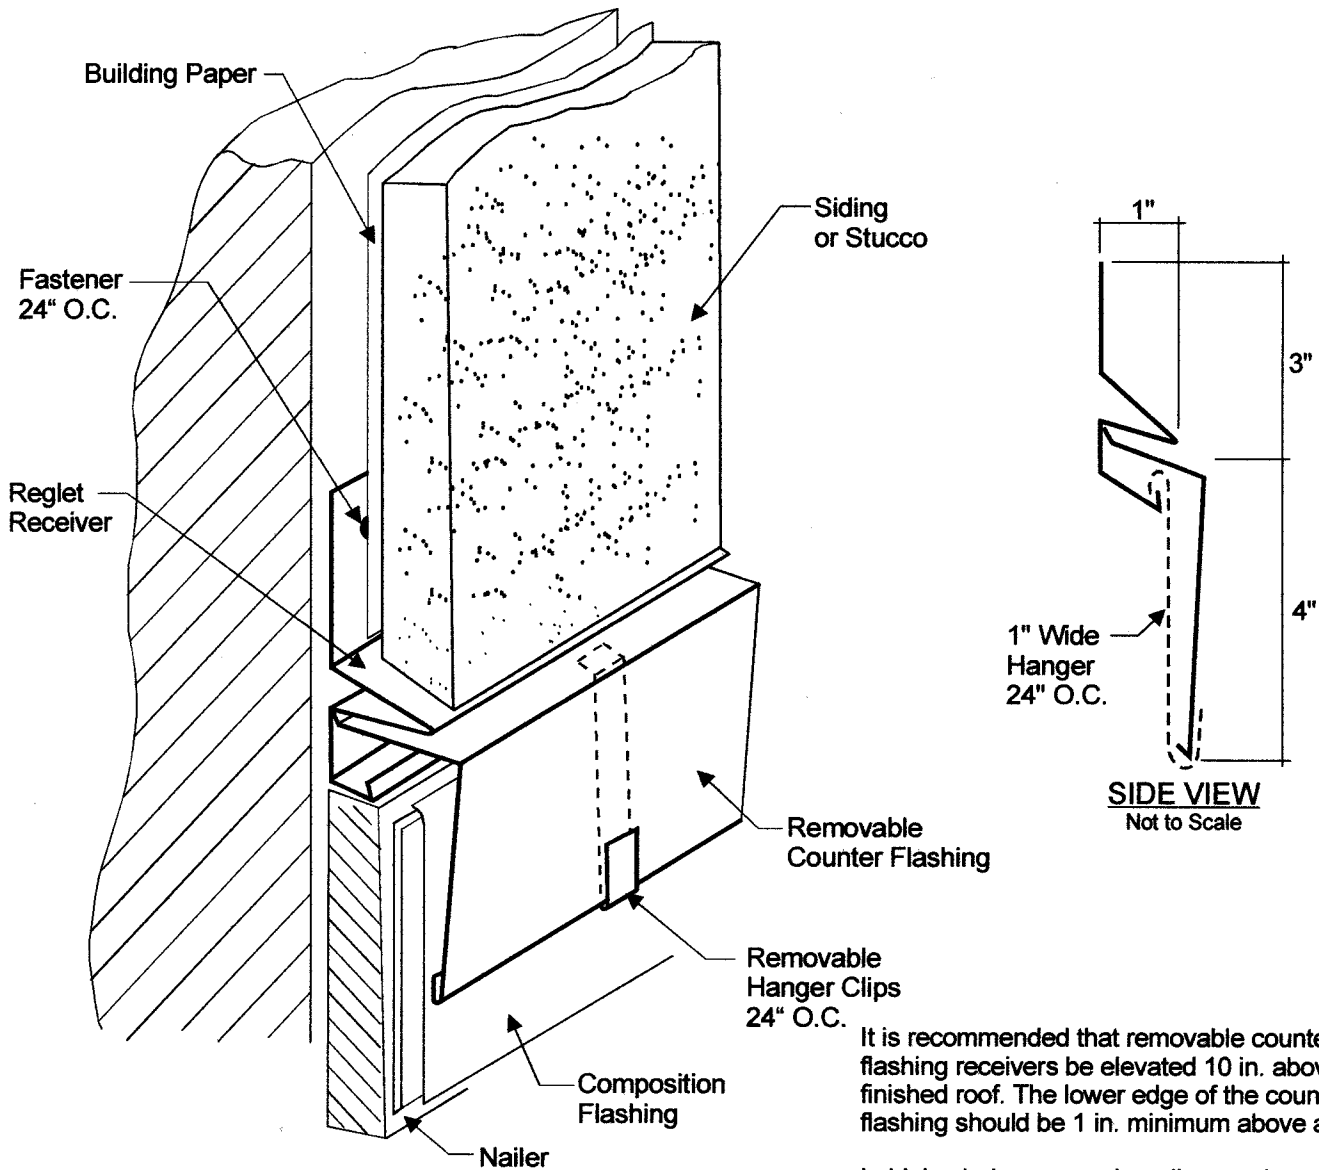

It is recommended that removable counter flashing receivers be elevated 10 in. above finished roof. The lower edge of the counter flashing should be 1 in. minimum above a cant.

In high wind areas anchor clips can be specified for the lower edge of the counter flashing in addition to hanger clips.



This information is Adapted From  
Architectural Sheet Metal Manual • 5th Ed.